

WESTIN AUTOMOTIVE
1-800-345-8476

INSTRUCTIONS TO REPLACE STEP PADS

1. PULL OR PRY OFF OLD PAD, BE CAREFUL NOT TO SCRATCH THE BAR
2. PRY OUT OLD BARREL CLIPS, AGAIN BE CAREFUL NOT TO SCRATCH THE BAR
3. INSERT NEW BARREL CLIPS, (THE BARREL CLIPS HAVE A SLOT ON ONE SIDE, MAKE SURE THE SLOT IS PARALLEL WITH THE BAR)
4. SET PAD ON CLIPS AND TAP PAD TO START INSERTION
5. WITH A RUBBER Mallet, HIT THE PAD IN THE MIDDLE FIRST, THEN ON EACH END. IF YOU START AT ONE END FIRST, THIS WILL BREAK THE PEGS OFF. THE PAD IS INSTALLED CORRECTLY IF YOU CANNOT GET A FINGERNAIL BETWEEN THE PAD AND THE BAR.

IF YOU HAVE ANY QUESTIONS OR CONCERNS, PLEASE CALL CUSTOMER SERVICE